



OWNER'S MANUAL


# Magic Remote

Please read this manual carefully before using your remote and retain it for future reference.


AN-MR18BA

# ACCESSORIES

The remote control image shown may differ from the actual product.  
(Depending on country)

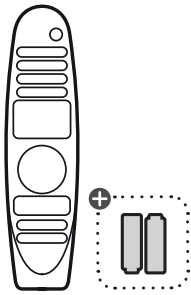 

 Magic Remote and Alkaline Batteries (AA)

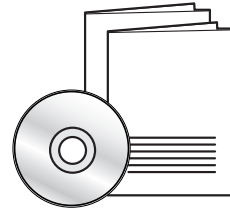


Owner's manual

- Contents in this manual may be changed without prior notice due to upgrade of product functions.

## BATTERY
 
### 1. Installing Batteries

- Please read this manual carefully.
- Press the top of the battery cover, slide it back, and lift the cover as shown below.
- To replace batteries, open the battery cover, replace alkaline batteries (1.5 V, AA) matching  $\oplus$  and  $\ominus$  ends to the labels in the compartment, and close the battery cover. Be sure to point the remote control at the remote control sensor on the TV.
- To remove the batteries, perform the installation actions in reverse. Don't mix old or used batteries with new ones. Close the cover securely.
- **Open the battery cover to find the label.**

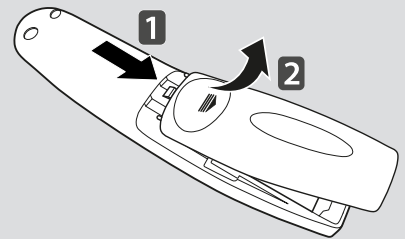


### 2. Precautions

- After replacement of the batteries, point the remote control and use it in accordance with the user manual.
- If the unit does not operate after replacement of batteries, reattempt pointing in accordance with the user manual.
- If the remote controller is not being used for prolonged periods of time, remove the batteries from the unit.
- Do not disassemble or expose the batteries to heat.
- Do not drop or exert extreme impact on the batteries. This may cause the case to be damaged.
- Do not immerse the batteries in water.
- There is danger of explosion if batteries are inserted incorrectly.
- Properly dispose of used batteries.
- Failure to match the correct polarities of the battery may cause the battery to burst or leak, resulting in fire, personal injury, or ambient pollution.

# REMOTE DESCRIPTION

- The remote control image shown may differ from the actual product.
- The order of description may differ from the actual product.
- Some buttons and services may not be provided depending on models or regions.

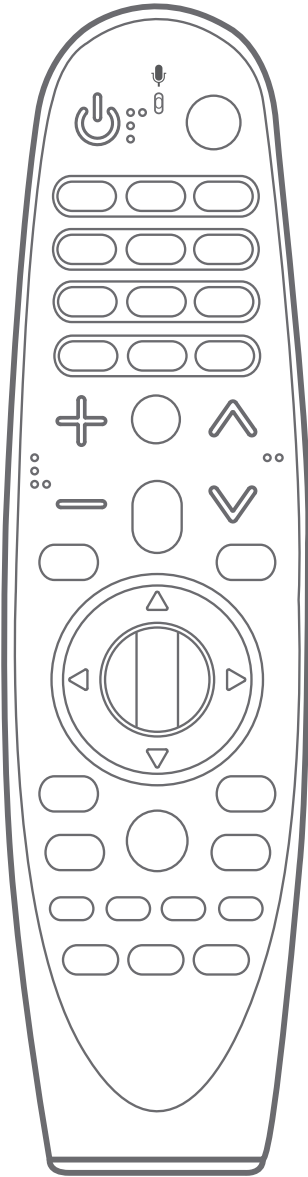 

## (POWER)

Turns the TV on or off.


## STB PWR / 機上盒電源

You can turn your set-top box on or off by adding the set-top box to the universal remote control for your TV.

## Number buttons

Enters numbers.

## (DASH)

Inserts a  (DASH) between numbers such as 2-1 and 2-2.

## LIST / 節目列表

Accesses the saved channels or programmes list.

## LIST\*/節目列表\*

Press this button to bring up BML data broadcasting. (Depending on country)

## QUICK ACCESS\*/ 智慧快選\*

You can access apps or Live TV using the number buttons corresponding to the features.

## (Screen remote)

Displays the Screen Remote.

- Accesses the Universal Control Menu in some regions.

## (Screen remote)\* / AD\*

Video/audio description functions will be enabled. (Depending on country)

- SAP (Secondary Audio Program) feature can also be enabled by pressing the

 (Screen remote)\* button. (Depending on country)

## + VOL / / 音量 -

Adjusts the volume level.

## (MUTE)

 
Mutes all sounds.



Accesses the Accessibility menu.

## CH / P / 頻道

Scrolls through the saved channels or programmes.

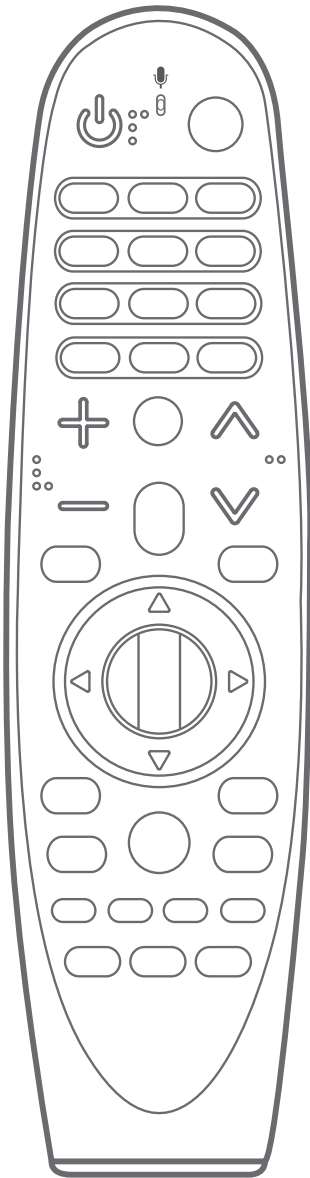

### (Voice recognition)\*

Once the voice display bars are activated on the TV screen, press and hold the button and speak your command out loud.

### (HOME)

Accesses the Home menu.

### (HOME)\* / RECENTS

Shows the previous history.

### STB MENU

Displays the set-top box Home menu. (When you are not watching via a set-top box: the display changes to the set-top box screen.)





### Wheel (OK)

Press the center of the  Wheel (OK) button to select a menu.

You can change channels or programmes by using the  Wheel (OK) button.

### (up/down/left/right)

Press the up, down, left, or right button to scroll the menu.

If you press     buttons while the pointer is in use, the pointer will disappear from the screen and the MagiC Remote will operate like a general remote control.

 
To display the pointer on the screen again, shake the MagiC Remote to the left and right.

### BACK / 返回

Returns to the previous screen.

### BACK\* / 返回\*

Clears on-screen displays and returns to last input viewing.

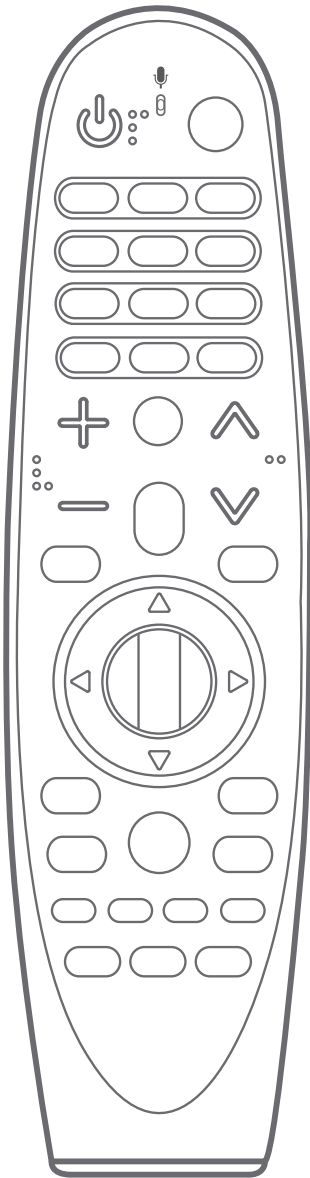

## GUIDE / 節目導覽

Shows channels or programmes guide.

## (INPUT)

Changes the input source.

## (INPUT)\*

Displays a list of all the external inputs.

## Streaming Service buttons

Connects to the Video Streaming Service.

## (Q. Settings)

Accesses the Quick Settings.

## (Q. Settings)\*

Displays the **All Settings** menu.

## Coloured buttons

These access special functions in some menus.

Red Button\*: Runs the record function. (Depending on country)

## Control buttons (▶, ||)

Controls media contents.

## TEXT / T.OPT (TELETEXT buttons)

These buttons are used for teletext.

## LIVE ZOOM / 即時縮放

By zooming in on the selected area, you can view it in full screen.

 
## FOCUS\* / 畫面放大\*

You can zoom in on the area where the remote control is pointed.

\* To use the button, press and hold for more than 3 seconds.


# USING

 
## 1. How to register (pair) or deregister (unpair)

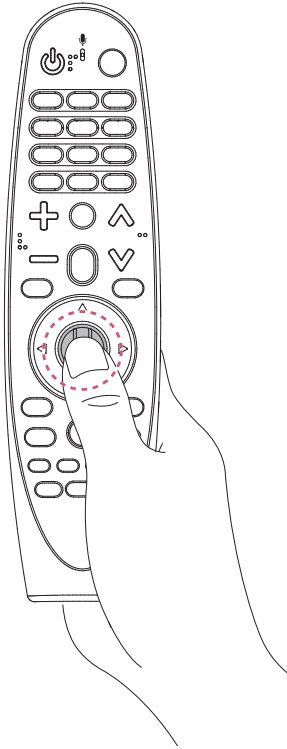


 
### How to register (pair) the Magic Remote

To use the Magic Remote, first pair it with your TV.

1. Put batteries into the Magic Remote and turn the TV on.
  2. Point the Magic Remote at your TV and press the  Wheel (OK) on the remote control.
- If the TV fails to register the Magic Remote, try again after turning the TV off and back on.


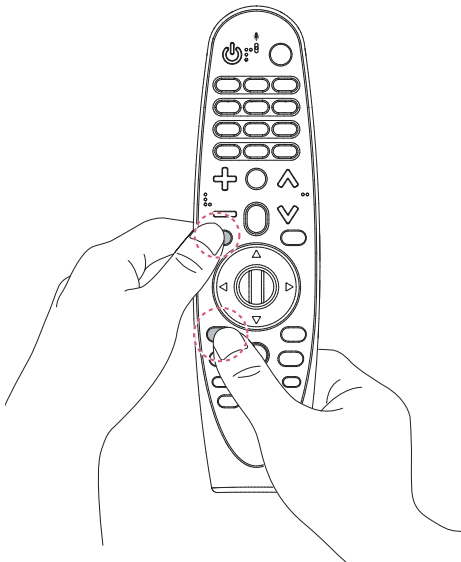






### How to deregister (unpair) the Magic Remote

      Press and hold the  (HOME) and  BACK / 返回 buttons at the same time for five seconds, to unpair the Magic Remote with your TV.

- Pressing and holding the **GUIDE / 節目導覽** button will let you cancel and re-register Magic Remote at once.

## 2. How to use

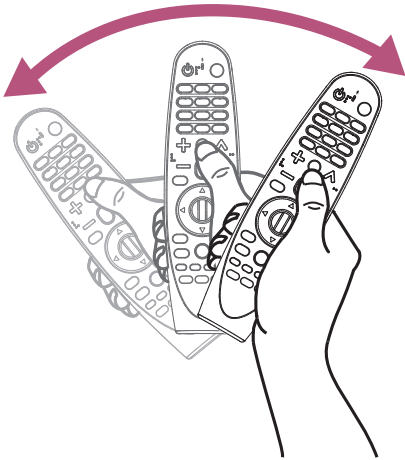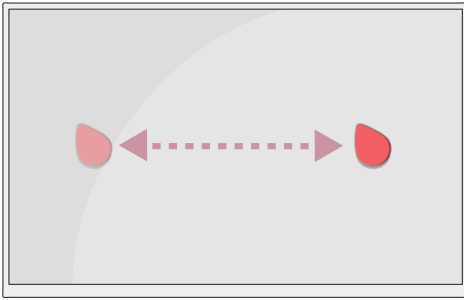

- Shake the Mag c Remote slightly to the right and left or press  (HOME), , or  (Q. Settings) buttons to make the pointer appear on the screen. (In some TV models, the pointer will appear when you turn the  Wheel (OK) button.)
- If the pointer has not been used for a certain period of time or Mag c Remotes placed on a flat surface, then the pointer will disappear.
- If the pointer does not respond smoothly, you can reset the pointer by moving it to the edge of the screen.
- The Mag c Remote depletes batteries faster than a normal remote due to the additional features.

## PRECAUTIONS TO TAKE

- Use the remote control within the specified range (within 10 m).  
You may experience communication failures when using the device outside the coverage area or if there are obstacles within the coverage area.
- You may experience communication failures depending on the accessories.  
Devices such as a microwave oven and wireless LAN operate in the same frequency band (2.4 GHz) as the Mag c Remote. This may cause communication failures.
- The Mag c Remote may not work properly if a wireless router (AP) is within 0.2 m of the TV. Your wireless router should be more than 0.2 m away from the TV.
- Do not disassemble or heat the batteries.
- Do not drop the battery. Avoid extreme shocks to the battery.
- Inserting a battery in the wrong way may result in explosion.
- Caution: Risk of fire or explosion if the battery is replaced by an incorrect type.

# SPECIFICATIONS

| CATEGORIES                    | DETAILS                                    |
|-------------------------------|--|
| Model No.                     | AN-MR18BA                                  |
| Range of frequency            | 2.400 GHz to 2.4835 GHz                    |
| Output Power (Max.)           | 4 dBm                                      |
| Channel                       | 40 channels                                |
| Power source                  | AA 1.5 V,<br>2 alkaline batteries are used |
| Operational temperature range | 0 °C to 40 °C                              |



